

Luxafor Switch PRO 2



User Manual

Contents

Luxafor Switch Pro 2 Package Contents

Product Specifications

- Luxafor Switch Pro 2 (Bluetooth Pro wireless indicator)

- Luxafor Switch Pro 2 (Cube 2 remote control)

Charging Instructions

Getting Started

Turning the Luxafor Switch Pro 2 Off

Sleep Mode


Eco Mode

Switch Mode

Reading the Battery Levels on the Cube 2 Remote

Understanding the Color Indicators

Luxafor Switch Pro 2 Package Contents

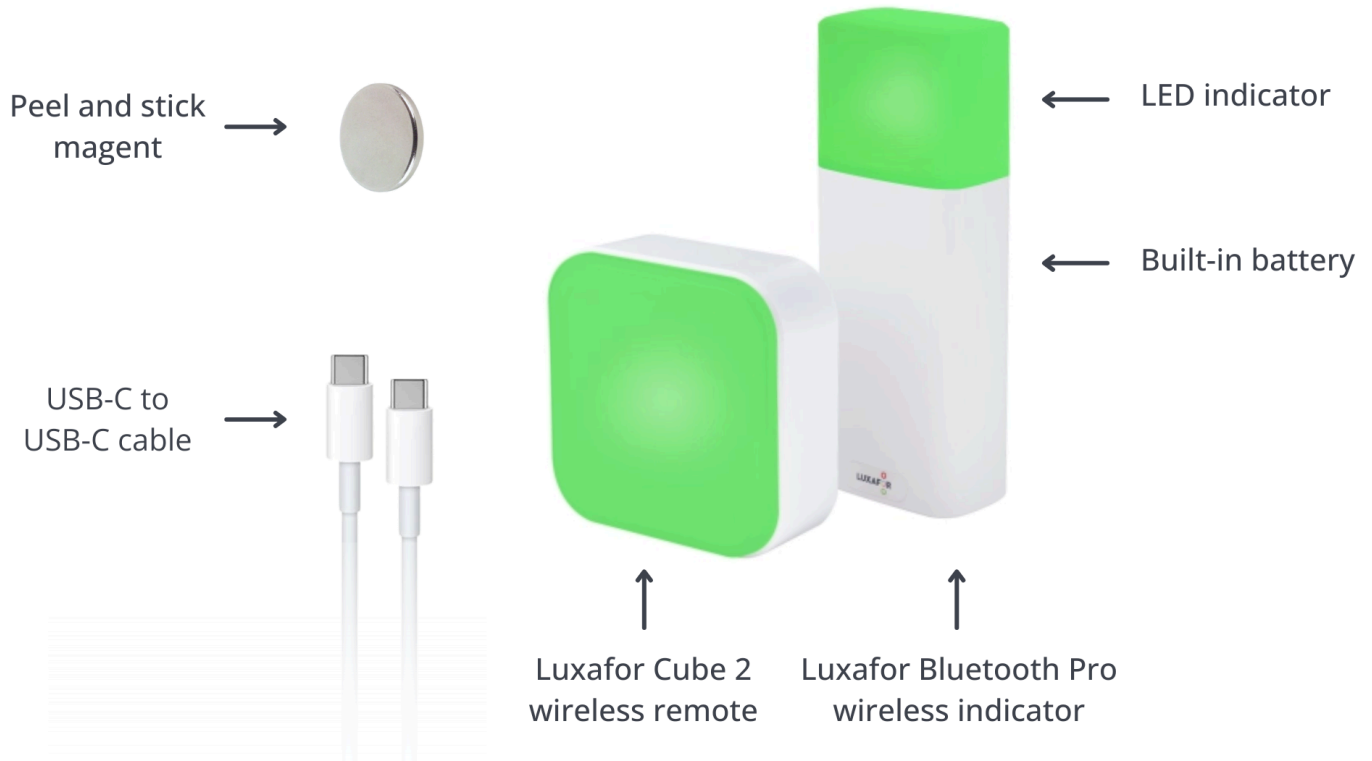

1 x Rechargeable Wireless Luxafor Indicator with built-in battery – the power source for the wireless availability indicator

1 x Luxafor Cube 2 – the remote control for the Luxafor wireless availability indicator

1x USB charging cable

1x Magnet with double-sided tape

Product Specifications



Luxafor Switch Pro 2
(Bluetooth Pro wireless indicator)

Dimensions: 98 x 37 x 22 mm (3.85 x 1.45 x 0.86")

Weight: 75 g

Light: 2 x RGB LEDs

Consumption: Rated power up to 80 mA

Charging: With a standard USB-C data cable (included)

Built-in 2600 mAh battery

Working time: 80 h – 12 months depending on brightness and working mode¹

Bluetooth 5.2 Radio with supported LE coded PHY.



Luxafor Switch Pro 2
(Cube 2 wireless remote)

Dimensions: 57 x 55 x 26 mm (2.24 x 2.24 x 1.02")

Weight: 68 g

Light: 6 x RGB LEDs

Consumption: Rated power up to 26 mA

Charging: With a standard USB-C data cable (included)

Built-in 1200 mAh battery

Working time: 46 h – 90 h non-stop use

Bluetooth connectivity range: Up to 80 meters

1. 50 h – 88 h on continuous use; up to 6 months on infrequent use; median time of 3 weeks on moderate use in co-working spaces.

2. Working time: average 66 h: 46 h on continuous use for yellow color (58 h in Eco mode); 73 h on continuous use in green, red, or blue colors (90 h working time in Eco mode).

Charging Instructions

1. Before use, charge the wireless Luxafor indicator and the Cube 2 remote by connecting the included charging cable to a USB power outlet such as a USB charger, and plug the other end into the device. The charging port for both units is located on the back.
2. The LED indicator on the wireless Luxafor indicator unit will glow red, showing that the unit is charging. Once the charging is complete, the LED indicator will turn green. Charging time is approx. 3-5 h for the built-in battery of the indicator and 2-4 h for the Luxafor Cube 2 unit.
3. If switched off, the remote Cube 2 will turn on immediately when the charging has begun.³ The level of battery power shows right after the device has been turned on (see “Reading the Battery Levels on the Cube 2 Remote” on page 8 of this manual).
4. You can use the Luxafor Cube 2 remote during the charging process – it will operate normally.

3. If the battery level for the Luxafor Switch PRO 2 Cube is extremely low, it is possible that when starting the charging process, the device will not turn on immediately. It will charge for a short period of time and once it has enough power, it will turn on and operate normally.

Getting Started

1. When the wireless Bluetooth Pro indicator unit and Luxafor Cube 2 remote have both been fully charged, you can use them together, connected wirelessly.

2. Remove the plastic from the double-sided tape that is on the magnet to attach it to the surface on which you would like to place the Luxafor Indicator (Bluetooth range without obstacles – 80 m (250 feet)). Ensure that the surface is smooth and clean before attachment to secure a strong bond and prevent detachment. It is important to follow this guideline as attaching the magnet to rough, dirty, or uneven surfaces can compromise the adhesive's effectiveness and the product's performance.

Note: Damage resulting from the attachment to improper surfaces is not covered under warranty and will not count towards warranty claims.

3. Short press the button at the back of the Luxafor Switch Pro wireless indicator unit to turn on the device.

4. Short press the button at the back of the Luxafor Cube 2 unit to turn on the device.

5. The Luxafor Cube 2 remote unit will then automatically create a connection with the closest Luxafor wireless indicator unit (a running red pattern will display on the Cube 2 remote while searching for a connection).

6. To connect the Cube 2 remote to another Luxafor wireless indicator unit: press and hold the button at the back of the Cube 2 remote for 10 seconds (a purple running pattern will be indicated). If the Cube 2 can't find any Luxafor Indicator units nearby during the Scanning or Connecting Regimes within 90 seconds, it will turn off.

To turn it back on again, press the button at the back of the Cube 2. Find the nearby unit by waiting for 90 seconds in the Scanning or Connecting Regimes.


5. Switch the colors on the Luxafor indicator unit remotely by rotating the Cube 2 remote sideways.



6. Placement options of the Cube 2 remote:

a) On a vertical surface, such as a wall or doorframe – attach the Cube 2 remote on the vertical surface with the same magnet that is used for the wireless indicator (see point 2 above).

b) On a horizontal surface, such as a desk – unpack the 4 anti-slip pads and carefully stick them to the back corners of the Cube 2 remote (see image below) and place it on a flat surface, such as a desk or any other flat surface.

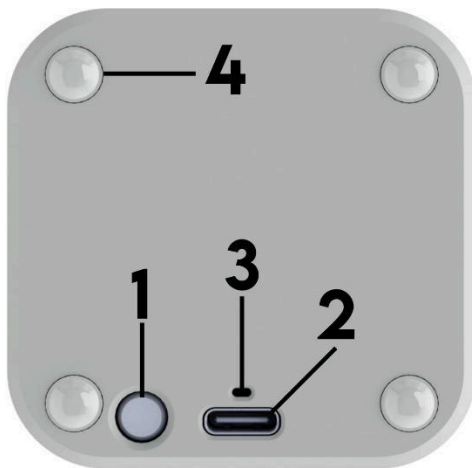

The Back of the Luxafor Cube 2

1. The power button to turn the device on/off as well to switch between Eco / Switch / standalone modes.
2. USB port for charging the device.
3. The charging indicator light is located above the USB port.
4. The 4 anti-slip pads (optional) should be placed at the back of the device on 4 corners.

Turning the Luxafor Switch Pro 2 Off

To turn the Luxafor Switch Pro 2 off – shortly press the button at the back of each unit (the wireless indicator and the Cube 2 remote).

Sleep Mode

If you place the Luxafor Cube 2 remote in a face-up position (laid down on its back), the device enters “Sleep Mode”. In this position, the device is not turned off but maintains a connection with the wireless indicator and it is ready to be used as soon as it is positioned upright again.

Eco Mode

Eco Mode can be used to extend the battery life of the Switch Pro 2. When it is activated, the Luxafor wireless indicator blinks slowly and the Cube 2 remote glows with a single diode.

To enter the Eco Mode, press and hold the button at the back of the Cube 2 remote until the yellow color is indicated (after 2-3 seconds) and then release. The same applies to exiting the Eco Mode.


Switch Mode

The Switch Mode is when the Cube 2 remote is connected with the indicator unit and acts as a switch for it. When Switch mode is not enabled, the Luxafor Cube 2 will act as a standalone device and indicate solid colors without controlling the colors on the indicator unit.⁵

To enter Switch Mode (or exit it) hold the button at the back of the Cube 2 remote for 3-5 seconds until it glows cyan and release. The Cube 2 remote will start looking for a connection with a nearby indicator unit (it must be turned on) and a circling red LED will be indicated. In case the devices do not connect, hold the power button on the Cube 2 remote for approximately 10 seconds until the purple color is indicated and then release. When the purple light is running clockwise, the Cube 2 remote unit is looking for a new connection with a nearby Luxafor Bluetooth device.

Reading the Battery Levels on the Cube 2 Remote

Place the Cube 2 remote in a face-up position to check the battery levels. The Cube 2 remote will indicate solid Blue color, and the total amount of LEDs shining will indicate approximate power left on the Cube 2 device. LEDs are placed as shown in the following scheme:

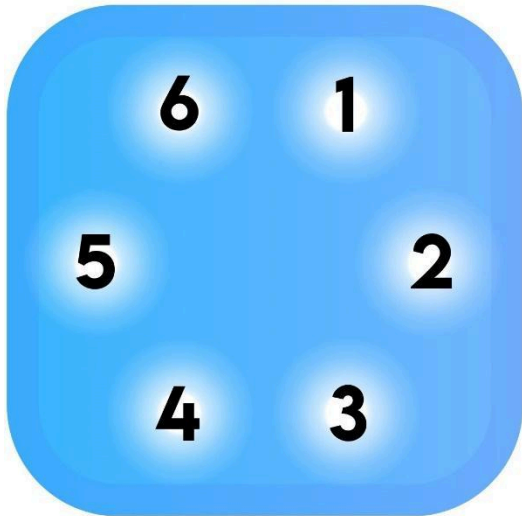

- The battery is fully charged when 6 LEDs are shining.
- The power level indicators will start to drop, starting from LED No. 1, going clockwise.
- Consequently, when the battery level is critically low, it will indicate only the LED No. 6 shining. Immediate charging is needed.

The battery levels will also be shown when the Luxafor Cube 2 unit has been just turned on.

Understanding the Color Indicators

Blue color lights flash for a while when placing the Cube 2 remote in a face-up position. In this position, the number of glowing LEDs display the battery level.

Yellow color upon longer pressing activates or deactivates Eco Mode.


Cyan (light blue) color after holding the button for 3-5 seconds changes the device between either Cube (standalone, solid glow) or Switch (connected with a Luxafor Indicator) mode.

Red running pattern: Connecting Regime. The Cube 2 remote is searching for a connection with a Luxafor indicator unit.

Purple: upon long-pressing the button the purple color is indicated when the remote is searching for a connection to a Luxafor Bluetooth Pro indicator unit.

Purple running pattern: Indicates that Cube 2 remote has started to connect with Luxafor Indicator unit, receiving the basic information about the device – reading FW, HW numbers, recognizing the device, monitoring battery levels.

Yellow color upon longer pressing activates or deactivates Eco Mode.

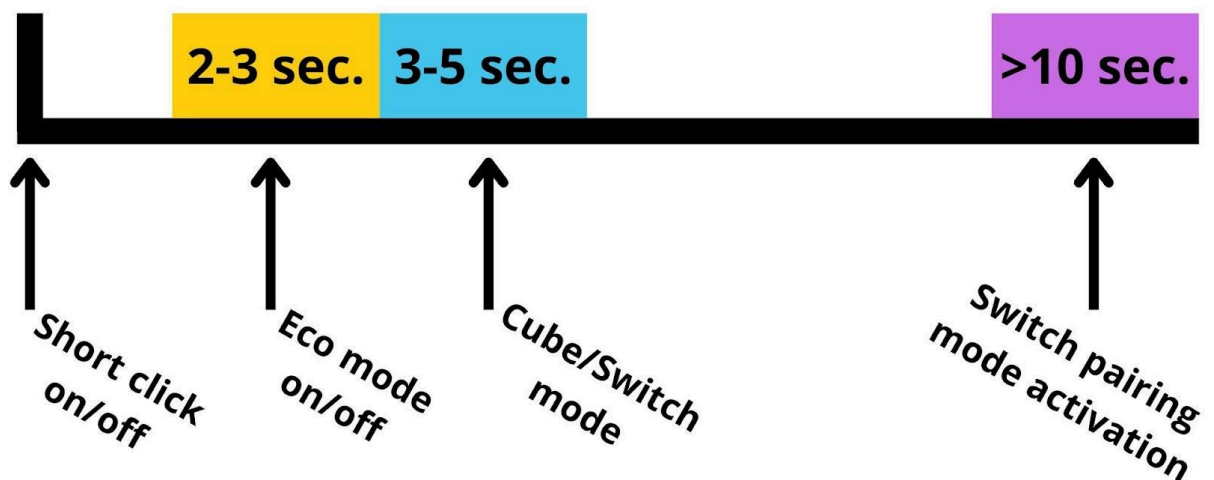

Apple iPhone Shortcuts integration

1. Install the Luxafor App for iPhone

Find it here: [LINK](#)

2. Connect Luxafor Bluetooth Pro to Your Phone

Open the Luxafor app on your iPhone.

Tap “Connect” to start searching for nearby Luxafor Bluetooth Pro indicators.

Select your Luxafor Bluetooth Pro from the list to pair with it.

Note: You have to disconnect the Cube 2 remote first by turning it off (press the button on the back).

3. Create a Shortcut to Change Luxafor Color

Open the [Shortcuts app](#) on your iPhone.

Tap “+” in the top right to create a new shortcut.

Tap “Add Action”, then search for “Luxafor” and select “Set solid color”.

Tap “Set Color”, then pick a color (e.g., Red for Busy).

Give the shortcut a name (e.g., “Busy”), and tap “Done”.

4. Add a homescreen widget to change color by triggering the shortcut from your homescreen

Open the shortcut you created and tap on the arrow next to the name of the shortcut

Choose an icon for the shortcut. For example, a red light bulb.

Again, tap on the arrow next to the name of the shortcut and tap “add to Home Screen”

You can repeat the steps to create multiple homescreen widgets, each for a unique color or for playing different blinking color patterns.

5. Explore custom triggers and create your own automations and shortcuts

Explore the Shortcuts app and use Luxafor Bluetooth Pro in your shortcuts. For example:

- Turn red when in a call
- Sync with “Focus Mode”
- Change colors with voice commands from Siri
- Double tap or triple tap the back of your iPhone to change colors (accessibility settings)
- Change colors when a meeting in your calendar starts
- Blink LED when a specific notification is received

If you have any questions, please don't hesitate to contact us at support@luxafor.com or call +371 27755544.

Send us a full report of the issue, explaining the details of the situation, when the issue first occurred, and if the issue persists throughout the troubleshooting process. We strongly recommend adding pictures/ videos to better explain the situation.

The Company reserves the right to change these terms and conditions at any time without prior notice. In the event that any changes are made, the revised changes shall be posted on this website immediately. Please check the latest information posted herein to inform yourself of any changes